QDA Pyroelectric Infrared Food, General IR Spectroscopy & Oil Monitoring Sensors, Array



Overview

KEMET's QDA line sensor arrays, or linear arrays, utilize unique thin-film pyroelectric PZT material to offer outstanding resolution and performance across a wide infrared wavelength range.

The ASIC readout electronics output is a multiplexed, amplified and filtered analogue signal for each sensor element. The sensor is housed in a low profile sealed metal package along with a temperature sensor, and can be fitted within a choice of filter windows.

An additional "+1" sensor element can provide higher sensitivity on a discrete wavelength, typically for lubrication oil or foodstuffs. This +1 sensor is located for ATR and transmission use.


For additional sources of information, please refer to the <u>Environmental Sensors page on KEMET.com</u>

Applications

- General IR spectroscopy (portable, robust spectral engines)
- Lubricating oil and fuel monitoring (quality, wear, adulteration)
- Foodstuffs (constitution, adulteration, milk tampering, decay)
- Industrial process and safety
- Process monitoring (wind turbine, petrochemical, pharmaceutical)
- · Engine condition monitoring
- Temperature measurement (non-contact line scanning measurement)
- · Flame, material, gas and gas flues analysis
- · HVAC and refrigerants
- · Home and building technology
- · Environmental and pollution monitoring
- Laser calibration
- Imaging (line scanning)
- Medical capnography
- · Markers in blood and body fluids

Benefits

- · Small package
- Excellent resolution and performance across a wide infrared wavelength
- · Broadband and LVF range can be selectable
- · No cooling required
- · No moving parts
- Evaluation kit 6 including linear array evaluation board
- · Evaluation kit 7 for ATR spectrometer
- Evaluation kit 8 for transmission spectrometer

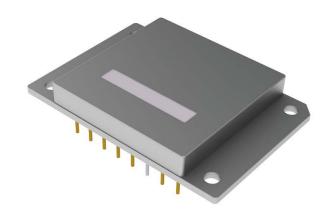



Ordering Information

| USE | QDA | A | A | 5101 | 0 | 0 |
|----------------|---|-------------|---|--|-----------|---------|
| Product Family | Series | Sensor Type | Mounting Type | Specification | Packaging | Version |
| Sensors | QDA = IR Sensor for Food Analysis, General IR Spectroscopy and Oil Monitoring | A = Array | A = Sensor only 6 = Kit type 6 7 = Kit type 7 7 = Kit type 8 | 5101 = AR Silicon (510 ch) 255S = AR Silicon (255 ch) 128S = AR Silicon (128 ch) 128L = LVF 5.5 - 11.0 μm (128 ch) 1285 = LVF 2.5 - 5.0 μm (128 ch) 128W = LVF 5.5 - 11.0 μm 128A = LVF 5.5 - 11.0 μm 0000 = Without sensor | 0 = Bulk | 0 |

Environmental Compliance

All KEMET Food, General IR Spectroscopy & Oil Monitoring Sensors are RoHS and REACH Compliant.





Article 33(1) of the REACH Regulation states that manufacturers and importers of articles (products) are required to notify their customers of the presence of any Substances of Very High Concern (SVHC) in their products exceeding 0.1% by weight and provide instructions on safe use of the product.

KEMET Corporation reports regarding the Article 33(1) of REACH Regulation as follows:

- 1. Applicable Product: Food Sensors (QDA & QDC series)
- 2. Report for the content of REACH SVHC list:

The product(s) above contains a substance by more than 0.1wt% per product weight that was published in the 8th update of the REACH SVHC substances (December 19, 2012).

3. Regarding the safety of the food sensors (Piezoceramic products):

The Piezoceramic that is used in this product becomes ceramic by sintering powder containing PZT as the main ingredient. It is chemically stable, with minimum risks toward the human body or environment within the intended use of the product. Please note that risks could occur in the case of inhalation or accidental oral uptake of powder ceramics.

4. Technical product information on the food sensors (Piezoceramic products):

The manufacturing technique of the "piezoceramic products" whose main ingredient is Lead Titanium Zirconium Oxide (PZT) has been established, and there is no alternative material that can exhibit superior performance than PZT at this moment. Please note that the piezoceramic is listed as an exempt on RoHS (2011/65/EU) AnnexIII (7c.1).


5. The responsibility of piezoceramic manufacturers:

Piezoceramic manufacturers report information regarding PZT containment in their products to the customers to obey the article 33 of the REACH regulation.



Dimensions - Millimeters

510 Element Line Sensor Array

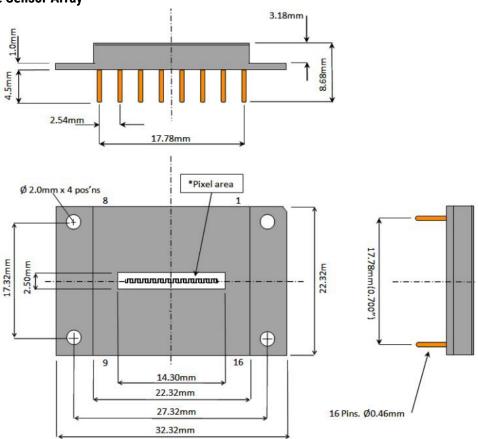


Pin Configuration of Sensor - 510 Element Line Sensor Array

| No. | Name | Comment |
|-----|------|--|
| 1 | CLK | Input clock CLK (trigger on rising edge) |
| 2 | RES | Input clock RES (active low) |
| 3 | VVR | Input clock VVR (active high) |
| 4 | VDR | Input clock VDR (active high) |
| 5 | VSH | Input clock VSH (active high) |
| 6 | VD2 | Operating voltage (+2.5 V) |
| 7 | AVDD | Operating voltage (+5 V) |
| 8 | VD2 | Operating voltage (+2.5 V) |
| 9 | OUT1 | Analogue signal output |
| 10 | AGND | Ground |
| 11 | OUT2 | Analogue signal out |
| 12 | T+ | Temperature sensor |
| 13 | T- | Temperature sensor |
| 14 | case | Case |
| 15 | DGND | Ground |
| 16 | DVDD | Operating voltage (+5 V) |



Dimensions - Millimeters cont.

255 and 128 Element Line Sensor Array

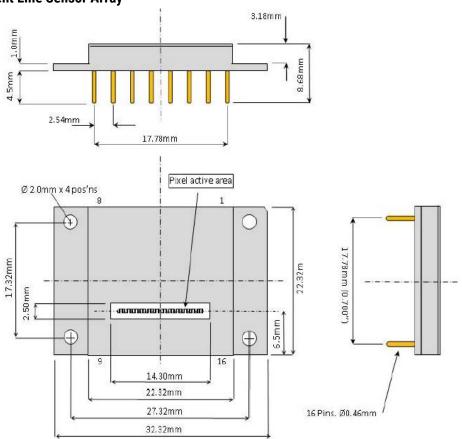


Pin Configuration of Sensor - 255 and 128 Element Line Sensor Array

| No. | Name | Comment |
|-----|------|--|
| 1 | CLK | Input clock CLK (trigger on rising edge) |
| 2 | RES | Input clock RES (active low) |
| 3 | VVR | Input clock VVR (active high) |
| 4 | VDR | Input clock VDR (active high) |
| 5 | VSH | Input clock VSH (active high) |
| 6 | VD2 | Operating voltage (+2.5 V) |
| 7 | AVDD | Operating voltage (+5 V) |
| 8 | VD2 | Operating voltage (+2.5 V) |
| 9 | OUT1 | Analogue signal output |
| 10 | AGND | Ground |
| 11 | n.c. | Not connected |
| 12 | T+ | Temperature sensor |
| 13 | T- | Temperature sensor |
| 14 | case | Case |
| 15 | DGND | Ground |
| 16 | DVDD | Operating voltage (+5 V) |



Dimensions - Millimeters cont.

128+1 Element Line Sensor Array

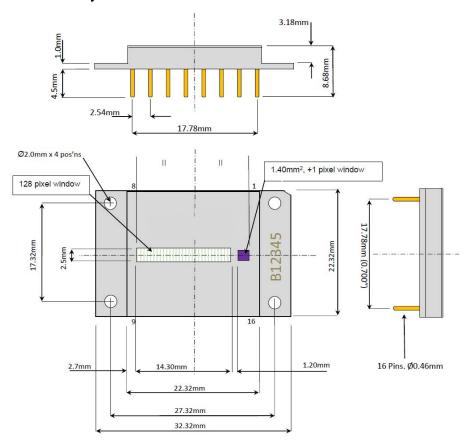

Pin Configuration of Sensor - 128+1 Element Line Sensor Array

| r iii Coiiiigurai | in Configuration of Sensor - 120+1 Element Line Sensor Array | | | |
|-------------------|--|-------------------------------|--|--|
| No. | Name | Comment | | |
| 1 | CLK | Input clock CLK (rising edge) | | |
| 2 | RES | Input clock RES (active low) | | |
| 3 | VVR | Input clock VVR (active high) | | |
| 4 | VDR | Input clock VDR (active high) | | |
| 5 | VSH | Input clock VSH (active high) | | |
| 6 | N/C | Not Connected | | |
| 7 | AVDD | Operating voltage (+5 V) | | |
| 8 | VD2 | Operating voltage (+2.5 V) | | |
| 9 | OUT | Analogue output (128 array) | | |
| 10 | AGND | Ground | | |
| 11 | 0UT 1 | Analogue output (+1 element) | | |
| 12 | T+ | Temperature sensor | | |
| 13 | T- | Temperature sensor | | |
| 14 | case | Case | | |
| 15 | N/C | Not Connected | | |
| 16 | DVDD | Operating voltage (+5 V) | | |



Clock Parameters

Thin-film pyroelectric line sensor array responds to and detects a change in infrared radiation intensity. It therefore requires a pulsed source of infrared radiation for measurement purposes.

| Parameter ¹ | Relative Value | Minimum Values | Recommended Value |
|---|---------------------|----------------|-------------------|
| Chopping Frequency ² f _{ch} | | 10 Hz | 128 Hz |
| Read-out Clock CLK f _{CLK} = 2* f _{Ch} * 268 | 1/t _{clk} | 5.36 KHz | 69 KHz |
| Reset clock low-impulse duration t _{RES} | ½ t _{clk} | 1.8 μs | 7.5 µs |
| Clock VVR high-impulse duration t _{vvR} | 2 t _{clk} | 7.5 µs | 30 µs |
| Clock VDR high-impulse duration t _{VDR} | 28 t _{clk} | 200 μs | 400 μs |
| Clock VSH high-impulse duration $t_{_{\!$ | 1 t _{clk} | 3.5 µs | 15 µs |

 $^{^{1}}$ All values for VDD = 5.0 V, VD2 = 2.5 V.


Maximum Settling Time at output tout is 1 μ second.

Clock Diagram

510 Element Line Sensor Array

The 510 channel line sensor contains two multiplexed analogue outputs, each one providing data from 255 channels. The first output (pin 9) provides data from all the even numbered pixels, counting upwards from 2 to 510. The second output (pin 11) provides data from all the odd numbered pixels, starting at pixel 509 and counting downwards to pixel 1. The clock diagram below shows which pixel numbers are available from each output as the device is clocked.

Pixel 1 is the nearest pin 1 of the device.

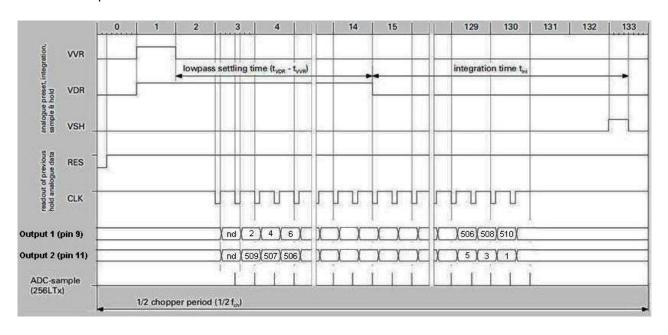


 $^{^{2}}$ $t_{Ch\ low} = t_{Ch\ high}$.



Clock Diagram cont.

255, 128 and 128+1 Element Line Sensor Array

Pixel 1 is the nearest pin 1 of the device.

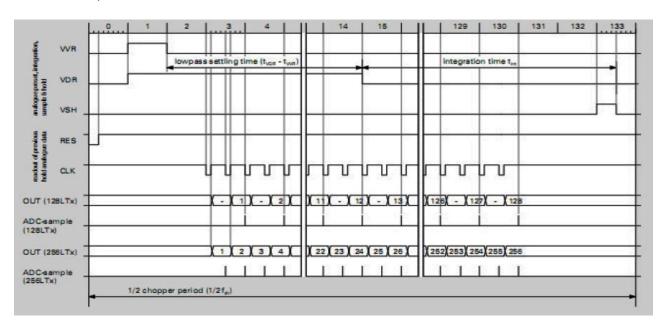

Part Number Specifications

Characteristics

| Wavelength Range (um) | Operating Temperature | Dynamic Range (dB) | Scan Speed (Hz) |
|-----------------------|-----------------------|--------------------|-----------------|
| 0.1 - 100.0 | Un-cooled operation | > 75 dB | 10 - 1,000 |



Part Number Specifications cont.

Part Number

| Part Number | Number of Pixels (Sensor Elements) | Pixel Size | Pixel Operability ¹ (%) | Filter Type | Transmission Wavelength (µm) | Weight (gr) |
|-----------------|---------------------------------------|--|--|---|---------------------------------|----------------|
| USEQDAAA510100 | 510 | 10 x 867 µm 25 µm pitch | 98 | Broadband (AR Silicon) | - | 11 |
| USEQDAAA255S00 | 255 | 50.0 x 417.5 µm pixels in 2 lines of 128 pixels Vertical separation between lines: 45 µm In line pixel pitch: 100 µm | 96 | Broadband (AR Silicon) | - | 11 |
| USEQDAAA128S00 | 128 | 60 x 500 μm 100 μm pitch | | Broadband (AR Silicon) | - | 11 |
| USEQDAAA128L00 | 128 | 60 x 500 μm 100 μm pitch | 96 | Linear Variable Filter | 5.5 - 11.0 (cwl 2%) | 11 |
| USEQDAAA128500 | 128 | 60 x 500 μm 100 μm pitch | | Linear Variable Filter | 2.5 - 5.0 (cwl 2%) | 11 |
| USEQDAAA128W00 | 128 | 60 x 500 μm 128 100 μm pitch | | Linear Variable Filter 5.5 – 11.0 (cwl | | - 11 |
| USEQDAAA128WUU | +1 | 1 mm² (33x larger than array pixels) | 2.90 μm/300 r | | for water content | 11 |
| 110500444100400 | 128 | 60 x 500 μm 100 μm pitch | 90 | Linear Variable Filter | 5.5 - 11.0 (cwl 2%) | 11 |
| USEQDAAA128A00 | +1 | 1 mm2 (33x larger than array pixels) | | 5.75 µm/100 nm | for fat "A" content | 11 |

¹ No more than 2 bad in any 10. This is an additional criterion to the pixel operability to limit the occurrence of bunched up faults.

Evaluation Kits

- · Quick prototype development
- · Easy way to evaluation
- · Easy to install software
- Digital output

There are are three different types of Linear Array demo kits. The simplest is USEQDAK6000000, a microprocessor powered board which interfaces to a PC and allows the user to test and evaluate the linear arrays listed in the table. These supported sensors are not included in the kit.



| Part Number | Supported Sensor | Includes | Weight (gr) |
|----------------------------|------------------|-------------------------------|-------------|
| HOEODAKCOOOOO | USEQDAAA510100 | Linear Array evaluation board | 350 |
| USEQDAK6000000 | USEQDAAA255S00 | 9 V DC power supply | |
| Use | USEQDAAA128S00 | USB communications cable | |
| Dama Daard for Fuel vetion | USEQDAAA128L00 | | • |
| Demo Board for Evaluation | USEQDAAA128500 | | |



Evaluation Kits cont.

The second set of kits proposes the same demo board in an ATR (Attenuated Total Reflection) spectrometer configuration with emitters and spectrometer software. The spectrometers are designed to be used as proof of principle demonstrations and as reference designs for the user's design work. The units are based on the pyroelectric Linear Array sensors with the use of Linear Variable filters (LVF) as solid state dispersion gratings. Using this technical approach it is possible to take near, mid, or far IR spectral readings (dependent on the LVF used) in a few seconds, and in almost any working environment.



ATR spectroscopy is one method for analysing the infra-red spectrum absorbance of liquids. It provides a very simple way to sample liquids onto the sample surface of the ATR spectrometer and quickly take measurements.

| Part Number | Use | Supported Sensor | Includes | Weight (gr) |
|----------------|-----------------------------|-------------------------|--|-------------|
| USEQDAK7000000 | Evaluation Kit for ATR Mode | USEQDAAA128S00 | Linear Array evaluation board and ATR spectrometer | 1,000 |
| | | USEQDAAA128L00 | 9 V DC power supply | |
| | | USEQDAAA128500 | USB communications cable | |

| Part Number | Use | Supported Sensor | Includes | Weight (gr) |
|----------------|-----------------------------|-------------------------|--|-------------|
| USEQDAK7128L00 | Evaluation Kit for ATR Mode | USEQDAAA128S00 | Linear Array evaluation board and ATR spectrometer | 1,000 |
| | | USEQDAAA128L00 | USEQDAAA128L00, LVF 5.5 - 11.0 μm | |
| | | USEQDAAA128500 | 9 V DC power supply | |
| | | | USB communications cable | |

| Part Number | Use | Supported Sensor | Includes | Weight (gr) |
|----------------|-----------------------------|------------------|--|-------------|
| USEQDAK7128500 | Evaluation Kit for ATR Mode | USEQDAAA128S00 | Linear Array evaluation board and ATR spectrometer | 1,000 |
| | | USEQDAAA128L00 | USEQDAAA128500, LVF 2.5 - 5.0 μm | |
| | | USEQDAAA128500 | 9 V DC power supply | |
| | | | USB communications cable | |



Evaluation Kits cont.

The third set of kits uses again the demo board, this time time in a transmission spectrometer configuration with emitters and spectrometer software. The spectrometers are designed to be used as proof of principle demonstrations and as reference designs for the user's design work. The units are based on the pyroelectric Linear Array sensors with the use of Linear Variable filters (LVF) as solid state dispersion gratings. Using this technical approach it is possible to take near, mid, or far IR spectral readings (dependent on the LVF used) in a few seconds, and in almost any working environment.



For the transmission spectrometer mode, it is necessary to prepare sample for analysis in a transmission cell, which are available from a variety of suppliers. The transmission sample cell can be placed in the spectrometer unit by sliding it into the black draw in the transmission kit. The cell can be used to record a background reading and then filled with sample material to record a spectrum.

| Part Number | Use | Supported Sensor | Includes | Weight (gr) |
|----------------|--------------------|-------------------------|---|-------------|
| USEQDAK8000000 | Evaluation Kit for | USEQDAAA128S00 | Linear Array evaluation board & transmission spectrometer | 1,000 |
| | Transmission Mode | USEQDAAA128L00 | 9 V DC power supply | |
| | | USEQDAAA128500 | USB communications cable | |


| Part Number | Use | Supported Sensor | Includes | Weight (gr) |
|----------------|--------------------|-------------------------|---|-------------|
| USEQDAK8128L00 | Evaluation Kit for | USEQDAAA128S00 | Linear Array evaluation board & transmission spectrometer | 1,000 |
| | Transmission Mode | USEQDAAA128L00 | USEQDAAA128L00, LVF 5.5 - 11.0 μm | |
| | | USEQDAAA128500 | 9 V DC power supply | |
| | | | USB communications cable | |

| Part Number | Use | Supported Sensor | Includes | Weight (gr) |
|----------------|--------------------|-------------------------|---|-------------|
| USEQDAK8128500 | Evaluation Kit for | USEQDAAA128S00 | Linear Array evaluation board & transmission spectrometer | 1,000 |
| | Transmission Mode | USEQDAAA128L00 | USEQDAAA128500 LVF 2.5 - 5.0 μm | |
| | | USEQDAAA128500 | 9 V DC power supply | |
| | | | USB communications cable | |




Evaluation Kits cont.

Transmission Emitter Drive Schematic

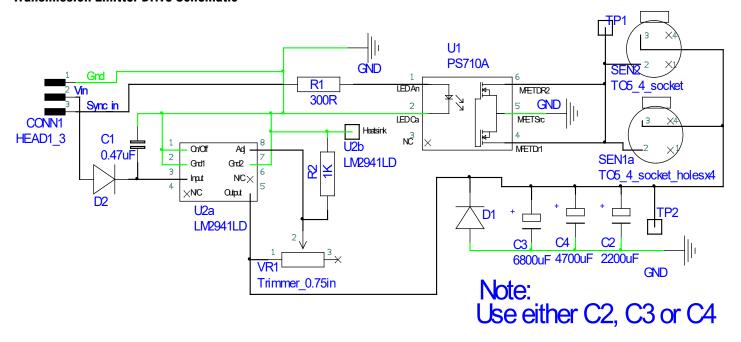

Circuit Diagram

The amplification circuit consists of low-noise preamplifiers for each individual sensor elements, analogue switches and an output amplifier. The pre-amplifiers transform the signal charges measured at each sensor element into a conditioned voltage. The amplified signal is then passed to sample and hold, multiplexer output buffer for the read-out process. The digital inputs are CMOS compatible. A 10k NTC thermistor is integrated within the package to monitor the line sensor temperature.

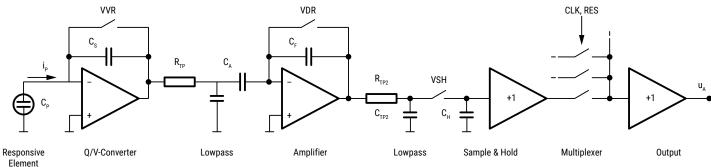



Packaging

| Series | Packaging Type | Piece per Box |
|--------|----------------|---------------|
| QDA | Cardboard Box | 1 |

Handling Precautions

Pyroelectric Infrared Sensors should be kept away from indirect and direct sunlight, the headlights of cars, wind, and exposure to strong vibration and strong shock.

Do not use in water, alcohol ETA, corrosive gas or under sea breeze.

Do not be expose to corrosive substances.

Do not drop or apply any mechanical stress.

The performance of this device can be affected by ESD. Precautions should be used when handling and installing the sensor. Precision devices such as this sensor can be damaged or caused not to meet published specification due to ESD. Please note that there is limited ESD protection built-in as the device is optimised for low power consumption and low noise operation. Human Body Model (HBM), per JS-001: 2,000 V.

Pyroelectric Infrared Sensors should be stored in normal working environments.

Solderability will be degraded by exposure to high temperatures, high humidity, corrosive atmospheres, and long-term storage.

KEMET recommends that ambient storage conditions are < 30°C and < 60% relative humidity and that maximum storage temperature does not exceed 110°C. Atmospheres should be free of chlorine and sulfur-bearing compounds. Temperature fluctuations should be minimized to avoid condensation on the parts.

For optimized solderability sensors stock should be used promptly, preferably within 24 months of receipt.



KEMET Electronics Corporation Sales Offices

For a complete list of our global sales offices, please visit www.kemet.com/sales.

Disclaimer

YAGEO Corporation and its affiliates do not recommend the use of commercial or automotive grade products for high reliability applications or manned space flight.

All product specifications, statements, information and data (collectively, the "Information") in this datasheet are subject to change. The customer is responsible for checking and verifying the extent to which the Information contained in this publication is applicable to an order at the time the order is placed. All Information given herein is believed to be accurate and reliable, but it is presented without guarantee, warranty, or responsibility of any kind, expressed or implied.

Statements of suitability for certain applications are based on KEMET Electronics Corporation's ("KEMET") knowledge of typical operating conditions for such applications, but are not intended to constitute – and KEMET specifically disclaims – any warranty concerning suitability for a specific customer application or use. The Information is intended for use only by customers who have the requisite experience and capability to determine the correct products for their application. Any technical advice inferred from this Information or otherwise provided by KEMET with reference to the use of KEMET's products is given gratis, and KEMET assumes no obligation or liability for the advice given or results obtained.

Although KEMET designs and manufactures its products to the most stringent quality and safety standards, given the current state of the art, isolated component failures may still occur. Accordingly, customer applications which require a high degree of reliability or safety should employ suitable designs or other safeguards (such as installation of protective circuitry or redundancies) in order to ensure that the failure of an electrical component does not result in a risk of personal injury or property damage.

Although all product-related warnings, cautions and notes must be observed, the customer should not assume that all safety measures are indicated or that other measures may not be required.

When providing KEMET products and technologies contained herein to other countries, the customer must abide by the procedures and provisions stipulated in all applicable export laws and regulations, including without limitation the International Traffic in Arms Regulations (ITAR), the US Export Administration Regulations (EAR) and the Japan Foreign Exchange and Foreign Trade Act.